

## Alarm Settings

To set the alarms for device, please follow the following step:

- Please select a vehicle from vehicle list, it will show alarm settings saved for that vehicle.
- Please select alarms from right side list to setup on device

**Alarm Settings**

**Vehicles**

Search...

**COMMON**

- PRLD Active Last 10/05/2021
- PRLDEV Active Last 27/09/2021

**Alarm Settings**

Select All (Every selected alarm upon activation counts towards a credit used.)

- IGNITION ON
- IGNITION OFF
- ENTER GEOFENCE
- LEAVE GEOFENCE
- LOCATE ON DEMAND
- SOS DURESS
- INPUT TRIGGER
- INPUT RELEASE
- MAIN POWER DISCONNECTION
- SPEED ALERT
- IDLE ALARM
- INTERNAL BATTERY LOW
- CRASH ALARM
- ENGINE MOBLIZE
- ENGINE IMMOBLIZE

**Note:** Please note that this option is applicable for CREDIT based subscriptions only. All LIVE based subscriptions have this feature available as default and included within the subscription fee.

- Click on Save button to save alarm settings.