

Device Setup

- Please select a vehicle from vehicle list to see already alert set for selected device.
- Select the Alerts checkbox which alert you want to set on device.

The screenshot displays the 'Device Setup' interface. On the left, a vertical sidebar contains navigation buttons for Alarm Settings, Device Setup, Geofences, Map Notification, Messaging Setup, and Recipient Setup. The main content area is divided into two panels: 'Vehicles' and 'General Alert Setup'. The 'Vehicles' panel shows a list of vehicles under a 'COMMON' group, including 'PRLD' (Active Last 10/05/2021) and 'PRLDEV' (Active Last 27/09/2021). The 'General Alert Setup' panel shows various alert options with checkboxes and input fields. The 'Speed' alert is selected, with a value of 20 and a speed type of 'kph'. The 'Tilt Shock' alert is also selected, with a value of 1.0 and a range of 'g(1.0 to 2.0)'. At the bottom right, there are 'Save' and 'Reset' buttons. A red arrow points from the 'Save' button to the third bullet point in the list above.

- Click on save button to set the alerts