

Alarm Settings

To set the alarms for credit device type, please follow the following step:

- Please select a vehicle from vehicle list, it will show alarm settings saved for that vehicle.
- Please select alarms from right side list to setup on device

The screenshot displays the 'Alarm Settings' interface. On the left is a sidebar with navigation buttons: 'Alarm Settings', 'Assign Driver Group To Driver', 'Assign Rfid/dallas Key To Driver', 'Assign Drivers To Vehicles', 'Automated Reporting', and 'Business Trip Rules'. The main area is divided into two panels. The 'Vehicles' panel shows a search bar and a list of assets, with one asset 'VRLK2103G 2737' selected. The 'Alarm Settings' panel contains a list of alarm types with checkboxes: 'Select All (Every selected alarm upon activation counts towards a credit used.)', 'IGNITION ON', 'IGNITION OFF', 'ENTER GEOFENCE', 'LEAVE GEOFENCE', 'LOCATE ON DEMAND', 'SOS DURESS', 'INPUT TRIGGER', 'INPUT RELEASE', 'MAIN POWER DISCONNECTION', 'SPEED ALERT', 'IDLE ALARM', 'INTERNAL BATTERY LOW', 'CRASH ALARM', 'ENGINE MOBLIZE', and 'ENGINE IMMOBLIZE'. At the bottom right, there are 'Save' and 'Reset' buttons. A note at the bottom states: 'Note: Please note that this option is applicable for CREDIT based subscriptions only. All LIVE based subscriptions have this feature available as default and included within the subscription fee.'

- Click on Save button to save alarm settings.