

## Device Setup

- Please select a vehicle from vehicle list to see already alert set for selected device.
- Select the Alerts checkbox which alert you want to set on device.

The screenshot displays the 'Device Setup' interface. On the left is a vertical navigation menu with icons for: Assign Rfid/dallas Key To Driver, Assign Drivers To Vehicles, Automated Reporting, Business Trip Rules, Device Setup, Geofences, and Inputs And Outputs. The main content area is divided into two sections: 'Vehicles' and 'General Alert Setup'. The 'Vehicles' section contains a search bar and a list of assets: VR400W 7042 (Active Last 27/09/2021) and VRLK2103G 2737 (Active Last 28/09/2021). The 'General Alert Setup' section includes several alert options: Internal Battery Alert, Trigger Low Battery Alert At (0.0 Volts), Trigger Main Power Cut Alert, Speed (OFF), Trigger Idle Alert Duration (Disabled), and Tilt Shock (1.0 g(1.0 to 2.0)). In the second, larger screenshot, the 'Speed' alert is selected with a checked checkbox and a value of 120. The 'Trigger Idle Alert Duration' is also selected with a checked checkbox and a value of 20 Minutes. At the bottom right of the interface, there are 'Save' and 'Reset' buttons. A red arrow points from the 'Save' button to the bottom-most bullet point in the list.

- Click on save button to set the alerts