

Inputs and Outputs

In this screen, you can relabel your input and output. For this select vehicle from vehicle list. And select the input/output from dropdown which you want to relabel.

If you want to give you label name, then select **Other** from list and enter a value in Textbox

The screenshot displays the 'Inputs And Outputs' configuration interface. On the left, a sidebar contains navigation buttons for Device Setup, Geofences, Inputs And Outputs, Maintenance Schedules, Map Notification, and Messaging Setup. The main area is split into two panels. The left panel shows a 'Vehicles' list with one asset selected: 'VR400W 7042'. The right panel, titled 'Rename Input/ Output', contains two tables. The top table has columns for 'Inputs', 'Trigger', and 'Release'. The bottom table has columns for 'Inputs', 'Trigger', and 'Release'. A dropdown menu is open for 'Input3', showing a list of vehicle events including 'Body Up', 'ABCD ON', 'Air Filter Restriction Normal', 'Auxiliary Engine On', 'AUXIN2 ON', 'Boot Open', 'Door Open', 'Engine Oil Pressure Normal', 'Engine Temperature Normal', 'Hydraulic Filter Restriction Normal', 'Hydraulic Oil Temperature Normal', 'Ignition On', 'PTO Start', 'Skip Open', 'Vehicle Start', 'Vibration ON', 'Window Open', and 'Other'. Red arrows indicate the workflow: selecting the vehicle, choosing an input/output from the dropdown, and clicking the 'Save' button at the bottom right.

Click on Save button to save label.