

Notification

- The Panel displays List of alerts associated with the User account

The screenshot displays the 'Map Notification' interface. On the left is a sidebar with navigation buttons: Alarm Settings, Assign Driver Group To Driver, Assign Rfid/dallas Key To Driver, Assign Drivers To Vehicles, Automated Reporting, and Business Trip Rules. The main area shows a table of notifications:

Event Name	Priority	Alert Sound	Display On Screen	Display Time (sec.)	Delete
Driver Overtime Report	Low	Off	Off	10 Seconds	
Power Cut	Low	Off	Off	10 Seconds	
Transmission on query	High	On	On	10 Seconds	

Below the table is the 'Add New Map Notification' form with fields for Event Name (a dropdown menu), Display Time (sec) (input field with '10'), High Priority (checkbox), Alert Sound (checkbox), and Display On Screen (checkbox), followed by an 'Add' button. A breadcrumb trail at the bottom reads 'Admin > Map Notification'.

- To add a new alert, select Event Name from the drop-down list and select alert display time in sec, Priority of alert, Sound when alert will come, and "Display on screen" if you see alert on your screen.
- clicks 'ADD' button to save.
- To delete an alert, click 'Delete icon' from respective alert.