

## Mobilize/Immobilize

- Please select vehicle from the left panel then on top menu click on the 'Engine Mobilize' or 'Engine Immobilize'.
- If you didn't select any vehicle, it will give you a warning.

The image displays two screenshots of a vehicle tracking software interface. The top screenshot shows the 'Mobilize/Immobilize' menu open, with 'Engine Mobilize' and 'Engine Immobilize' options visible. The bottom screenshot shows a warning dialog box with the text: 'Warning! Please select at least one asset to send Mobilize command.' The interface includes a search bar, a table of assets, a map, and various control buttons.

Vehicle	Driver	Plan	Date	Time	Speed	Location
VR420W 7042	Moky	Live	30/09/2021	10:51:45	20.00	35, Esplanade, Nedlands, Perth

Vehicle	Driver	Plan	Last Active On	Last Location	
VR420W 7042	Moky	Live	30/09/2021 10:51:45	20.00	35, Esplanade, Nedlands, Perth

Vehicle	Driver	Plan	Last Active On	Last Location	
VR420W 7042	Moky	Live	30/09/2021 10:51:45	20.00	35, Esplanade, Nedlands, Perth

Event Time	Ign	Speed	Trip	Location
No Record Found.				

Event Time	Ign	Speed	Trip	Location
No Record Found.				